

solo[®]

SHUT-OFF VALVE REPAIR KIT

(06010402-K)

(Lesco part # 480029)

SAFETY PRECAUTIONS:

1. Avoid contact with chemicals, wear protective clothing, and work in a well ventilated area.
2. Ensure all pressure in the sprayer has been relieved by opening the shut-off valve.
3. Thoroughly flush the sprayer with water. Fill the tank and pump water through the sprayer.

PROCEDURE:

1. To remove the valve core you must first take off the lever. To do this, remove the retaining pin by squeezing the notched end and pushing through the shut-off valve body. Pull the pin head until the pin clears the lever. Slide the lever off the valve core.
2. Once the handle is off, the screw cap (1) can be removed and the spring and valve core (4) pushed out. Discard screw cap, spring and valve core. Lubricate* the o-rings (5 & 6) on the new valve core and insert into shut-off valve body. Insert the spring into the body and the o-ring (2) into the screw cap (1). Tighten the screw cap.
3. Depress the lever and release 2-3 times to distribute the lubricant. The lever should "snap-up" when released. Re-install the shut-off valve to the sprayer.

*Vaseline[®], heavy grease or any non-water soluble grease.

PARTS INCLUDED:

<u>DESCRIPTION</u>	<u>REFERENCE #</u>
Screw Cap	1
O-Ring	2
Spring	3
Valve Core	4
O-Ring	5
O-Ring	6

